



ELITE OUTLAW

Transmission Bracket Kit


Elite Outlaw Transmission kit for transmission mounted cable.

Remove the two rear transmission pan bolts.

Place bracket below transmission pan rail
using the spacers and bolts provided.

Number **Three** hole is recommended on shifter
bracket lever, but you can use anyone that
may fit your application better.

Shifter bracket lever must point up as
shown in photo below.

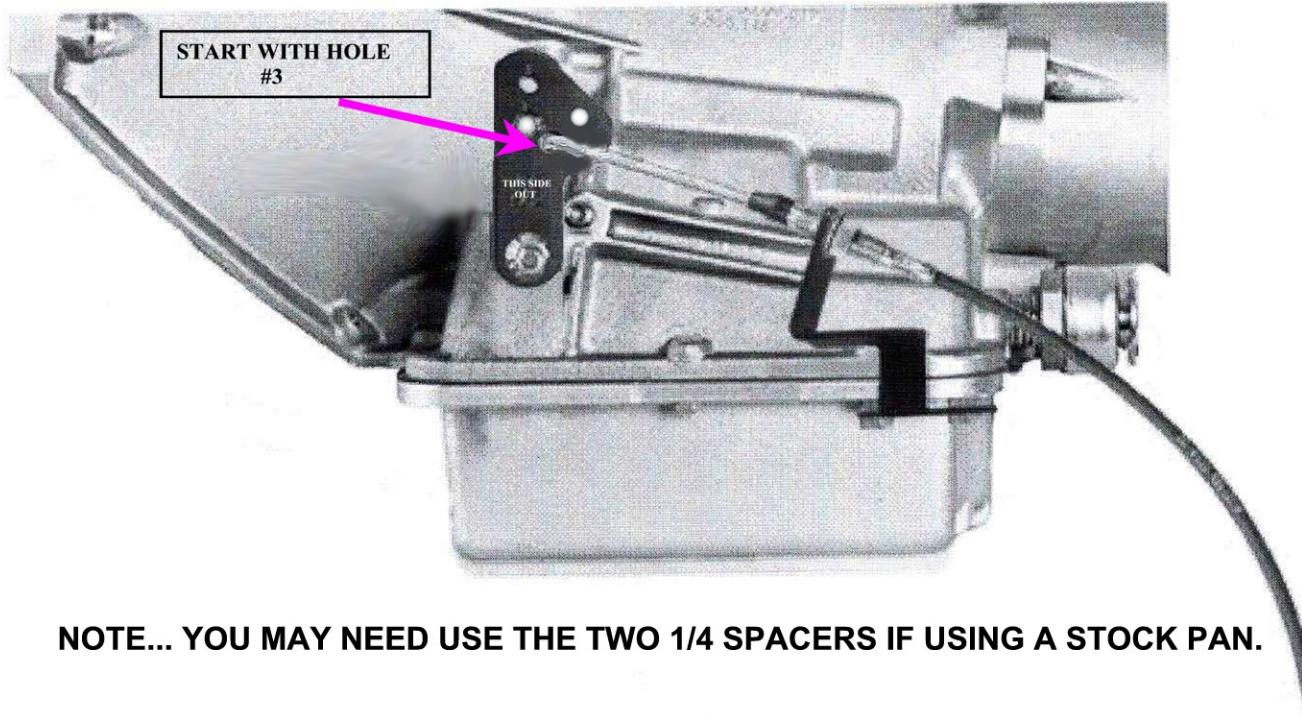

NOTE... YOU MAY NEED USE THE TWO 1/4 SPACERS IF USING A STOCK PAN.